




**PLEASE COMPLETELY UNDERSTAND ALL USER INSTRUCTIONS AND SAFETY INFORMATION BEFORE USING THIS PRODUCT. AS WITH ANY HIGH TECH PRODUCT YOU WILL NEED TO ROUTINELY CHECK FOR LOOSE HARDWARE, CRACKS OR OTHER DAMAGE AND REPLACE ITEMS AS NECESSARY. DO NOT USE PRODUCT IF ANY OF THESE CONDITIONS EXIST.**



**USING THE TEKUTE TT 660 FEATURES:**

- a. RIGHT HAND SIDE COMPARTMENT-** Insulated & padded compartment to protect your cell phone from the elements.
- b. LEFT HAND SIDE COMPARTMENT-** Insulated compartment to keep nutrition cool. May also be used to store tools, CO2s, etc.
- c. ELECTRICAL CABLE-** Use a pen or pencil to locate the access slot on the inside of the front of the bag.
- d. I.D POCKET-** Use the clear pocket for your emergency information, credit card and cash.
- e. CARABINER SNAP HOOK-** Use to attach your keys for safe keeping.
- f. DIVIDER-** Remove if you want one large storage compartment.

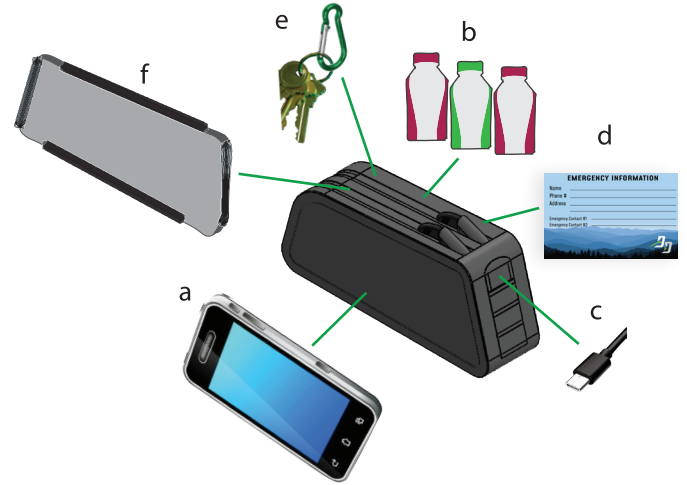

**TEKUTE TT 660 INSTALLATION INSTRUCTIONS:**

**STRAPS AND HARDWARE INCLUDED**

- a. Frame straps, 189 x 19 mm [x2]
- b. Steerer tube strap, 207 x 12 mm [x1]
- c. M5 x 16 mm button flange bolts [x2]



**TOOLS REQUIRED**

- 4 mm Hex Wrench
- Torque Wrench 1.1 Nm



**A. MOUNTING BAG USING FRAME STRAPS**

You have a choice of 3 sets of loops. Choose the set that positions the bag where you want it. **Figure A.** With the Velcro facing towards the bag, thread the round end of a 189 x 19 mm frame strap through one of the slots on the bottom of the bag. Repeat with the second frame strap. **Figure B.**

Position the bag on a main frame tube where it will be safe, and where it will not interfere with any rotating or moving part of the bike. Wrap the strap around the tube and thread the end through the buckle. Pull the strap tight and push the hook end of the Velcro into the soft loop surface of the strap ensuring a secure fasten. **Figures C & D.**



**6 loops (3 sets)**

**Figure A**



**Figure B**



**Figure C**



*Top tube bag installation using straps*

**Figure D**

## B. MOUNTING BAG USING BOLTS

You have a choice of 3 sets of holes for the bolts. **Figure E.**  
Insert the M5 x 16 mm flanged bolts through the slits and holes until they protrude through the bottom of the bag. Loosely thread both bolts into the bike's inserts. Using a 4 mm Hex wrench, torque each bolt to 1.1 Nm (10 lbf-in). **Figure F.**



**Bolt holes**

**Figure E**




**Bolt slits**

**Figure F**

## C. MOUNTING THE OPTIONAL STEERER TUBE/FRONT STRAP

The bag is very stable even without the traditional front strap. If you want to use it there is a choice of 3 loops on the front of the bag. Choose the one that aligns with the best position on your spacers or headset. Best position is when strap is parallel to the ground. With the Velcro side towards the bag, thread the strap through the loop, then around the headset/spacer and then thread the end through the buckle. Tighten just enough so it doesn't restrict the movement of any cables. **Figures G & H.**

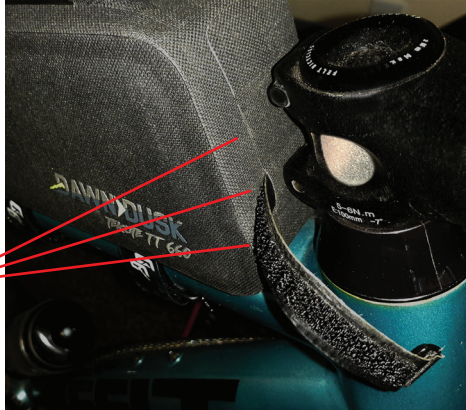

**3 positions**

**Figure G**



**Figure H**

## CARE INSTRUCTIONS:

- Hand wash with warm water and dish soap to prolong life.
- Do not use bleach or cleaners containing chlorine.
- Clean zipper and zipper garage with a toothbrush, regularly.
- Air dry

## WARRANTY:

Materials and workmanship have a limited warranty of 5 years. Normal wear and tear is excluded. See full details on our website.